



ABNORMAL TEST RESULT

OF MODEL PDA600F

1. Did Cheese Cloth or Paper Glow?

No.

2. Did Ground Fuse Open?

No.

3. Dielectric breakdown?

No.

4. Other Results?

See the following pages .

(FMEA : 2/42 ~ 41/42)
(Abnormal Test Result: 42/42 ~ 42/42)

There was no emission of flame, molten metal, ignition of cheesecloth, dielectric breakdown, opening of the ground fuse, other indication of a shock or fire hazard.



F M E A

Component	Mode	Comment	Output Voltage (V)
C101	Open	Normal operation.	AVR1:*
	Short	F101 opened, No hazard.	AVR1:0
C102	Open	Normal operation.	AVR1:*
	Short	F101 opened, No hazard.	AVR1:0
C108	Open	Normal operation.	AVR1:*
	Short	F101 opened, No hazard.	AVR1:0
C109	Open	See page 42.	
	Short	F101 opened, No hazard.	AVR1:0
C110	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C111	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C112	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C113	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C114	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C115	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C116	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C117	Open	Normal operation.	AVR1:*
	Short	See page 42.	



F M E A

Component	Mode	Comment	Output Voltage (V)
C118	Open	Normal operation.	AVR1:*
	Short	See page 42.	
C119	Open	Normal operation.	AVR1:*
	Short	See page 42.	
C123	Open	F101 opened, No hazard.	AVR1:0
	Short	F101 opened, No hazard.	AVR1:0
C124	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C125	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C126	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C127	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C128	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C140	Open	F101 opened, No hazard.	AVR1:0
	Short	F101 opened, No hazard.	AVR1:0
C201	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
C204	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
C206	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0



F M E A

Component	Mode	Comment	Output Voltage (V)
C207	Open	Normal operation.	AVR1:*
	Short	See page 42.	
C208	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
C209	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
C210	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
C212	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
C301	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:*
C302	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:*
C303	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C304	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C305	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C306	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C309	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0



F M E A

Component	Mode	Comment	Output Voltage (V)
C311	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
C312	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
C314	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
C315	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C316	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
C317	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
C318	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C319	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
C320	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
C321	Open	No Hazard.	AVR1:0
	Short	No Hazard.	AVR1:0
C323	Open	Normal operation.	AVR1:*
	Short	Output voltage decreased. No hazard.	AVR1:decreased
C324	Open	Output voltage decreased. No hazard.	AVR1:decreased
	Short	No Hazard.	AVR1:0



F M E A

Component	Mode	Comment	Output Voltage (V)
C325	Open	Output voltage decreased. No hazard.	AVR1:decreased
	Short	Normal operation.	AVR1:*
C328	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
C329	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
C330	Open	No Hazard.	AVR1:0
	Short	No Hazard.	AVR1:0
C331	Open	F101 opened, No hazard.	AVR1:0
	Short	F101 opened, No hazard.	AVR1:0
C332	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C333	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C334	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C335	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
C350	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
C351	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
C401	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*



F M E A

Component	Mode	Comment	Output Voltage (V)
C402	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C404	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
C405	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C406	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
C407	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
C409	Open	No Hazard.	AVR1:0
	Short	Normal operation.	AVR1:*
C410	Open	No Hazard.	AVR1:0
	Short	Normal operation.	AVR1:*
C411	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C412	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C413	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
C414	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
C415	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*



F M E A

Component	Mode	Comment	Output Voltage (V)
C416	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C501	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C502	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C503 (Only -15, -5)	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C504 (Only -15, -5)	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C505	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C506	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C507	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C508	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C509 (Except:-5)	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
C510 (Except:-5)	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
C511	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0



F M E A

Component	Mode	Comment	Output Voltage (V)
C512	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
C513	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
C514	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
C515	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C516	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C517	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C518	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C519 (Except:-36, -48)	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C520 (Except:-36, -48)	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C522	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C523	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C542	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*



F M E A

Component	Mode	Comment	Output Voltage (V)
C601	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
C603	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
C605	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C606	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C609	Open	Output voltage decreased. No hazard.	AVR1:decreased
	Short	Output voltage decreased. No hazard.	AVR1:decreased
C610	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C614	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C615	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
C616	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
C617	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
C618	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C619	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*



F M E A

Component	Mode	Comment	Output Voltage (V)
C620	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C622	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
C630	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
C631	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
C632	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
C633	Open	Normal operation.	AVR1:*
	Short	Output voltage decreased. No hazard.	AVR1:decreased
C634	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
C640	Open	Normal operation.	AVR1:*
	Short	Output voltage decreased. No hazard.	AVR1:decreased
C701	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C702	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
C703	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
C704	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0



F M E A

Component	Mode	Comment	Output Voltage (V)
C707	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C708	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
C709	Open	Normal operation.	AVR1:*
	Short	See page 42.	
C711	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C712	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C713	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C714	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C715	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
C716	Open	Normal operation.	AVR1:*
	Short	See page 42.	
D101	Open	F101 opened, No hazard.	AVR1:0
	Short	F101 opened, No hazard.	AVR1:0
D102	Open	F101 opened, No hazard.	AVR1:0
	Short	F101 opened, No hazard.	AVR1:0
D103	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*



F M E A

Component	Mode	Comment	Output Voltage (V)
D104	Open	Normal operation.	AVR1:*
	Short	F101 opened, No hazard.	AVR1:0
D105	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
D106	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
D107	Open	F101 opened, No hazard.	AVR1:0
	Short	F101 opened, No hazard.	AVR1:0
D202	Open	Normal operation.	AVR1:*
	Short	F101 opened, No hazard.	AVR1:0
D301	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
D303	Open	Normal operation.	AVR1:*
	Short	F101 opened, No hazard.	AVR1:0
D304	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
D306	Open	Normal operation.	AVR1:*
	Short	F101 opened, No hazard.	AVR1:0
D307	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
D308	Open	No Hazard.	AVR1:0
	Short	Output voltage decreased. No hazard.	AVR1:decreased
D309	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*



F M E A

Component	Mode	Comment	Output Voltage (V)
D310	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
D401	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
D402	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
D403	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
D404	Open	No Hazard.	AVR1:0
	Short	No Hazard.	AVR1:0
D601	Open	No Hazard.	AVR1:0
	Short	No Hazard.	AVR1:0
D602	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
D603	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
D607	Open	Output voltage decreased. No hazard.	AVR1:decreased
	Short	Output voltage decreased. No hazard.	AVR1:decreased
D608	Open	Output voltage decreased. No hazard.	AVR1:decreased
	Short	Output voltage decreased. No hazard.	AVR1:decreased
D609	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
D610	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*



F M E A

Component	Mode	Comment	Output Voltage (V)
D616	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
D701	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
D702	Open	Normal operation.	AVR1:*
	Short	No Hazard.	AVR1:0
D703	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
D704	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
D705	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
D706	Open	No Hazard.	AVR1:0
	Short	Normal operation.	AVR1:*
D711	Open	Normal operation.	AVR1:*
	Short	Normal operation.	AVR1:*
FAN701	Open	1	Normal operation.
		2	No Hazard.
		3	Normal operation.
		4	No Hazard.
	Short	1-2	Normal operation.
		2-3	Normal operation.
		3-4	Normal operation.
IC201	Open	1	No Hazard.



F M E A

Component		Mode	Comment	Output Voltage (V)
IC201	Open	2	No Hazard.	AVR1:0
		3	No Hazard.	AVR1:0
		4	No Hazard.	AVR1:0
		5	No Hazard.	AVR1:0
		6	No Hazard.	AVR1:0
		7	No Hazard.	AVR1:0
		8	No Hazard.	AVR1:0
		1-2	No Hazard.	AVR1:0
	Short	2-3	No Hazard.	AVR1:0
		3-4	No Hazard.	AVR1:0
		5-6	No Hazard.	AVR1:0
		6-7	No Hazard.	AVR1:0
		7-8	F101 opened, No hazard.	AVR1:0
IC301	Open	1	No Hazard.	AVR1:0
		2	Normal operation.	AVR1:*
		3	Normal operation.	AVR1:*
		4	No Hazard.	AVR1:0
		5	Normal operation.	AVR1:*
		6	Normal operation.	AVR1:*
		7	Normal operation.	AVR1:*
		8	No Hazard.	AVR1:0
		9	No Hazard.	AVR1:0
		10	No Hazard.	AVR1:0
		11	No Hazard.	AVR1:0



F M E A

Component		Mode	Comment	Output Voltage (V)
IC301	Open	12	No Hazard.	AVR1:0
		13	No Hazard.	AVR1:0
		14	No Hazard.	AVR1:0
		15	Normal operation.	AVR1:*
		16	Normal operation.	AVR1:*
		17	Normal operation.	AVR1:*
		18	Normal operation.	AVR1:*
		19	No Hazard.	AVR1:0
		20	Normal operation.	AVR1:*
	Short	1-2	No Hazard.	AVR1:0
		2-3	No Hazard.	AVR1:0
		3-4	Normal operation.	AVR1:*
		4-5	Normal operation.	AVR1:*
		5-6	No Hazard.	AVR1:0
		6-7	Normal operation.	AVR1:*
		7-8	Normal operation.	AVR1:*
		8-9	No Hazard.	AVR1:0
		9-10	No Hazard.	AVR1:0
		11-12	No Hazard.	AVR1:0
		12-13	Normal operation.	AVR1:*
		13-14	No Hazard.	AVR1:0
		14-15	Normal operation.	AVR1:*
		15-16	Normal operation.	AVR1:*
		16-17	No Hazard.	AVR1:0



F M E A

Component		Mode	Comment	Output Voltage (V)
IC301	Short	17-18	No Hazard.	AVR1:0
		18-19	No Hazard.	AVR1:0
		19-20	No Hazard.	AVR1:0
IC302	Open	1	No Hazard.	AVR1:0
		2	No Hazard.	AVR1:0
		3	Normal operation.	AVR1:*
		4	No Hazard.	AVR1:0
		5	No Hazard.	AVR1:0
	Short	1-2	No Hazard.	AVR1:0
		2-3	Normal operation.	AVR1:*
		4-5	No Hazard.	AVR1:0
IC303	Open	1	Normal operation.	AVR1:*
		2	Normal operation.	AVR1:*
		3	No Hazard.	AVR1:0
		4	Normal operation.	AVR1:*
		5	No Hazard.	AVR1:0
	Short	1-2	Normal operation.	AVR1:*
		2-3	Normal operation.	AVR1:*
		4-5	No Hazard.	AVR1:0
IC401	Open	1	Normal operation.	AVR1:*
		2	No Hazard.	AVR1:0
		3	No Hazard.	AVR1:0
		4	No Hazard.	AVR1:0
		5	Normal operation.	AVR1:*



F M E A

Component		Mode	Comment	Output Voltage (V)
IC401	Open	6	Normal operation.	AVR1:*
		7	Normal operation.	AVR1:*
		8	Normal operation.	AVR1:*
		9	Normal operation.	AVR1:*
		10	Normal operation.	AVR1:*
		11	No Hazard.	AVR1:0
		12	No Hazard.	AVR1:0
	Short	1-2	No Hazard.	AVR1:0
		2-3	No Hazard.	AVR1:0
		3-4	No Hazard.	AVR1:0
		4-5	See page 42.	
		5-6	Normal operation.	AVR1:*
		7-8	Normal operation.	AVR1:*
		8-9	Normal operation.	AVR1:*
		9-10	Normal operation.	AVR1:*
		10-11	See page 42.	
		11-12	Normal operation.	AVR1:*
IC501	Open	1	Normal operation.	AVR1:*
		2	Normal operation.	AVR1:*
		3	Normal operation.	AVR1:*
		4	Normal operation.	AVR1:*
		5	Normal operation.	AVR1:*
	Short	1-2	Normal operation.	AVR1:*
		2-3	Normal operation.	AVR1:*



F M E A

Component	Mode		Comment	Output Voltage (V)
IC501	Short	4-5	Normal operation.	AVR1:*
IC601	Open	1	No Hazard.	AVR1:0
		2	No Hazard.	AVR1:0
		3	No Hazard.	AVR1:0
	Short	1-2	No Hazard.	AVR1:0
		2-3	No Hazard.	AVR1:0
IC603	Open	1	Normal operation.	AVR1:*
		2	Normal operation.	AVR1:*
		3	Normal operation.	AVR1:*
		4	No Hazard.	AVR1:0
		5	No Hazard.	AVR1:0
		6	No Hazard.	AVR1:0
		7	No Hazard.	AVR1:0
		8	No Hazard.	AVR1:0
	Short	1-2	Normal operation.	AVR1:*
		2-3	Normal operation.	AVR1:*
		3-4	Normal operation.	AVR1:*
		5-6	No Hazard.	AVR1:0
		6-7	No Hazard.	AVR1:0
		7-8	No Hazard.	AVR1:0
IC604	Open	1	Normal operation.	AVR1:*
		2	Normal operation.	AVR1:*
		3	No Hazard.	AVR1:0
		4	No Hazard.	AVR1:0



F M E A

Component	Mode		Comment	Output Voltage (V)
IC604	Open	5	No Hazard.	AVR1:0
		1-2	Normal operation.	AVR1:*
	Short	2-3	Normal operation.	AVR1:*
		4-5	No Hazard.	AVR1:0
IC701	Open	1	Normal operation.	AVR1:*
		2	Normal operation.	AVR1:*
		3	Normal operation.	AVR1:*
	Short	1-2	No Hazard.	AVR1:0
		2-3	Normal operation.	AVR1:*
L101	Open	1	No Hazard.	AVR1:0
		2	No Hazard.	AVR1:0
		3	No Hazard.	AVR1:0
		4	No Hazard.	AVR1:0
	Short	1-2	F101 opened, No hazard.	AVR1:0
		2-3	No Hazard.	AVR1:0
		3-4	F101 opened, No hazard.	AVR1:0
L102	Open	1	No Hazard.	AVR1:0
		2	No Hazard.	AVR1:0
		3	No Hazard.	AVR1:0
		4	No Hazard.	AVR1:0
	Short	1-2	F101 opened, No hazard.	AVR1:0
		2-3	Normal operation.	AVR1:*
		3-4	F101 opened, No hazard.	AVR1:0
L103	Open	1	No Hazard.	AVR1:0



F M E A

Component		Mode	Comment	Output Voltage (V)
L103	Open	2	No Hazard.	AVR1:0
		3	F101 opened, No hazard.	AVR1:0
		4	F101 opened, No hazard.	AVR1:0
	Short	1-2	F101 opened, No hazard.	AVR1:0
		2-3	F101 opened, No hazard.	AVR1:0
		3-4	F101 opened, No hazard.	AVR1:0
L509	Open	1	No Hazard.	AVR1:0
		2	No Hazard.	AVR1:0
	Short	1-2	F101 opened, No hazard.	AVR1:0
PC301	Open	A, K	Normal operation.	AVR1:*
		C, E	Normal operation.	AVR1:*
	Short	A-K	Normal operation.	AVR1:*
		C-E	No Hazard.	AVR1:0
PC302	Open	A, K	Normal operation.	AVR1:*
		C, E	Normal operation.	AVR1:*
	Short	A-K	Normal operation.	AVR1:*
		C-E	No Hazard.	AVR1:0
PC303	Open	A, K	No Hazard.	AVR1:0
		C, E	No Hazard.	AVR1:0
	Short	A-K	No Hazard.	AVR1:0
		C-E	No Hazard.	AVR1:0
PC603	Open	A, K	Normal operation.	AVR1:*
		C, E	Normal operation.	AVR1:*
	Short	A-K	Normal operation.	AVR1:*



F M E A

Component	Mode		Comment	Output Voltage (V)
PC603	Short	C-E	Normal operation.	AVR1:*
PC702	Open	A, K	Normal operation.	AVR1:*
		C, E	Normal operation.	AVR1:*
	Short	A-K	Normal operation.	AVR1:*
		C-E	Normal operation.	AVR1:*
PC703	Open	A, K	Normal operation.	AVR1:*
		C, E	Normal operation.	AVR1:*
	Short	A-K	Normal operation.	AVR1:*
		C-E	Normal operation.	AVR1:*
PTH601	Open		No Hazard.	AVR1:0
	Short		Normal operation.	AVR1:*
PTH602	Open		No Hazard.	AVR1:0
	Short		Normal operation.	AVR1:*
R101	Open		Normal operation.	AVR1:*
R102	Open		Normal operation.	AVR1:*
R103	Open		Normal operation.	AVR1:*
R104	Open		Normal operation.	AVR1:*
R105	Open		Normal operation.	AVR1:*
R112	Open		F101 opened, No hazard.	AVR1:0
R113	Open		F101 opened, No hazard.	AVR1:0
R114	Open		F101 opened, No hazard.	AVR1:0
R115	Open		Normal operation.	AVR1:*
R116	Open		Normal operation.	AVR1:*
R117	Open		Normal operation.	AVR1:*



F M E A

Component	Mode	Comment	Output Voltage (V)
R119	Open	F101 opened, No hazard.	AVR1:0
R120	Open	Normal operation.	AVR1:*
R121	Open	Normal operation.	AVR1:*
R122	Open	No Hazard.	AVR1:0
R128	Open	Normal operation.	AVR1:*
R129	Open	Normal operation.	AVR1:*
R130	Open	F101 opened, No hazard.	AVR1:0
R131	Open	Normal operation.	AVR1:*
R214	Open	No Hazard.	AVR1:0
R215	Open	No Hazard.	AVR1:0
R216	Open	No Hazard.	AVR1:0
R217	Open	No Hazard.	AVR1:0
R218	Open	No Hazard.	AVR1:0
R219	Open	No Hazard.	AVR1:0
R220	Open	No Hazard.	AVR1:0
R225	Open	F101 opened, No hazard.	AVR1:0
R227	Open	Normal operation.	AVR1:*
R228	Open	Normal operation.	AVR1:*
R229	Open	No Hazard.	AVR1:0
R230	Open	No Hazard.	AVR1:0
R231	Open	No Hazard.	AVR1:0
R232	Open	No Hazard.	AVR1:0
R233	Open	No Hazard.	AVR1:0
R234	Open	No Hazard.	AVR1:0



F M E A

Component	Mode	Comment	Output Voltage (V)
R235	Open	Normal operation.	AVR1:*
R301	Open	Normal operation.	AVR1:*
R303	Open	No Hazard.	AVR1:0
R304	Open	Normal operation.	AVR1:*
R305	Open	Normal operation.	AVR1:*
R306	Open	Normal operation.	AVR1:*
R307	Open	Normal operation.	AVR1:*
R309	Open	No Hazard.	AVR1:0
R310	Open	Normal operation.	AVR1:*
R311	Open	Normal operation.	AVR1:*
R312	Open	Normal operation.	AVR1:*
R313	Open	Normal operation.	AVR1:*
R314	Open	Normal operation.	AVR1:*
R315	Open	Normal operation.	AVR1:*
R316	Open	Normal operation.	AVR1:*
R317	Open	Normal operation.	AVR1:*
R318	Open	Normal operation.	AVR1:*
R321	Open	Normal operation.	AVR1:*
R322	Open	Normal operation.	AVR1:*
R323	Open	Normal operation.	AVR1:*
R324	Open	Normal operation.	AVR1:*
R325	Open	No Hazard.	AVR1:0
R326	Open	No Hazard.	AVR1:0
R327	Open	No Hazard.	AVR1:0



F M E A

Component	Mode	Comment	Output Voltage (V)
R328	Open	No Hazard.	AVR1:0
R329	Open	No Hazard.	AVR1:0
R330	Open	No Hazard.	AVR1:0
R331	Open	No Hazard.	AVR1:0
R332	Open	No Hazard.	AVR1:0
R336	Open	No Hazard.	AVR1:0
R337	Open	No Hazard.	AVR1:0
R338	Open	No Hazard.	AVR1:0
R339	Open	Normal operation.	AVR1:*
R340	Open	Normal operation.	AVR1:*
R341	Open	No Hazard.	AVR1:0
R342	Open	No Hazard.	AVR1:0
R343	Open	No Hazard.	AVR1:0
R344	Open	Normal operation.	AVR1:*
R345	Open	No Hazard.	AVR1:0
R346	Open	Normal operation.	AVR1:*
R347	Open	Normal operation.	AVR1:*
R348	Open	No Hazard.	AVR1:0
R349	Open	No Hazard.	AVR1:0
R350	Open	No Hazard.	AVR1:0
R353	Open	No Hazard.	AVR1:0
R355	Open	No Hazard.	AVR1:0
R356	Open	No Hazard.	AVR1:0
R360	Open	No Hazard.	AVR1:0



F M E A

Component	Mode	Comment	Output Voltage (V)
R361	Open	Normal operation.	AVR1:*
R362	Open	No Hazard.	AVR1:0
R363	Open	F101 opened, No hazard.	AVR1:0
R371	Open	No Hazard.	AVR1:0
R372	Open	No Hazard.	AVR1:0
R373	Open	Normal operation.	AVR1:*
R374	Open	No Hazard.	AVR1:0
R380	Open	Normal operation.	AVR1:*
R381	Open	Normal operation.	AVR1:*
R382	Open	Normal operation.	AVR1:*
R383	Open	Normal operation.	AVR1:*
R384	Open	Normal operation.	AVR1:*
R385	Open	Normal operation.	AVR1:*
R386	Open	Normal operation.	AVR1:*
R387	Open	Normal operation.	AVR1:*
R388	Open	Normal operation.	AVR1:*
R390	Open	Normal operation.	AVR1:*
R401	Open	No Hazard.	AVR1:0
R402	Open	Normal operation.	AVR1:*
R403	Open	Normal operation.	AVR1:*
R404	Open	Normal operation.	AVR1:*
R405	Open	Normal operation.	AVR1:*
R406	Open	Normal operation.	AVR1:*
R407	Open	Normal operation.	AVR1:*



F M E A

Component	Mode	Comment	Output Voltage (V)
R409	Open	No Hazard.	AVR1:0
R410	Open	No Hazard.	AVR1:0
R411	Open	No Hazard.	AVR1:0
R412	Open	No Hazard.	AVR1:0
R413	Open	Normal operation.	AVR1:*
R414	Open	Normal operation.	AVR1:*
R415	Open	No Hazard.	AVR1:0
R416	Open	Normal operation.	AVR1:*
R418	Open	No Hazard.	AVR1:0
R419	Open	No Hazard.	AVR1:0
R420	Open	No Hazard.	AVR1:0
R421	Open	Normal operation.	AVR1:*
R422	Open	Normal operation.	AVR1:*
R423	Open	Normal operation.	AVR1:*
R425	Open	Normal operation.	AVR1:*
R501	Open	Normal operation.	AVR1:*
R502	Open	Normal operation.	AVR1:*
R503	Open	Normal operation.	AVR1:*
R504	Open	Normal operation.	AVR1:*
R505	Open	Normal operation.	AVR1:*
R506	Open	Normal operation.	AVR1:*
R507	Open	Normal operation.	AVR1:*
R508	Open	Normal operation.	AVR1:*
R509	Open	Normal operation.	AVR1:*



F M E A

Component	Mode	Comment	Output Voltage (V)
R510	Open	Normal operation.	AVR1:*
R511	Open	Normal operation.	AVR1:*
R512	Open	Normal operation.	AVR1:*
R513	Open	Normal operation.	AVR1:*
R514	Open	Normal operation.	AVR1:*
R515	Open	Normal operation.	AVR1:*
R516	Open	Normal operation.	AVR1:*
R517	Open	Normal operation.	AVR1:*
R518	Open	Normal operation.	AVR1:*
R520	Open	Normal operation.	AVR1:*
R521	Open	Normal operation.	AVR1:*
R522	Open	Normal operation.	AVR1:*
R523	Open	Normal operation.	AVR1:*
R524	Open	Normal operation.	AVR1:*
R525	Open	Normal operation.	AVR1:*
R526	Open	Normal operation.	AVR1:*
R527	Open	Normal operation.	AVR1:*
R528	Open	Normal operation.	AVR1:*
R529	Open	Normal operation.	AVR1:*
R530	Open	Normal operation.	AVR1:*
R531	Open	Normal operation.	AVR1:*
R532	Open	Normal operation.	AVR1:*
R533	Open	Normal operation.	AVR1:*
R534	Open	Normal operation.	AVR1:*



F M E A

Component	Mode	Comment	Output Voltage (V)
R535	Open	Normal operation.	AVR1:*
R536	Open	Normal operation.	AVR1:*
R537	Open	Normal operation.	AVR1:*
R538	Open	Normal operation.	AVR1:*
R539	Open	Normal operation.	AVR1:*
R540	Open	Normal operation.	AVR1:*
R541	Open	Normal operation.	AVR1:*
R542	Open	Normal operation.	AVR1:*
R543	Open	Normal operation.	AVR1:*
R544	Open	Normal operation.	AVR1:*
R545	Open	Normal operation.	AVR1:*
R546	Open	Normal operation.	AVR1:*
R547	Open	Normal operation.	AVR1:*
R548	Open	Normal operation.	AVR1:*
R549	Open	Normal operation.	AVR1:*
R550	Open	Normal operation.	AVR1:*
R551	Open	Normal operation.	AVR1:*
R552	Open	Normal operation.	AVR1:*
R553	Open	Normal operation.	AVR1:*
R554	Open	Normal operation.	AVR1:*
R555	Open	Normal operation.	AVR1:*
R556	Open	Normal operation.	AVR1:*
R557	Open	Normal operation.	AVR1:*
R558	Open	Normal operation.	AVR1:*



F M E A

Component	Mode	Comment	Output Voltage (V)
R559	Open	Normal operation.	AVR1:*
R560	Open	Normal operation.	AVR1:*
R561	Open	Normal operation.	AVR1:*
R562	Open	Normal operation.	AVR1:*
R563	Open	Normal operation.	AVR1:*
R564	Open	Normal operation.	AVR1:*
R565	Open	Normal operation.	AVR1:*
R566	Open	Normal operation.	AVR1:*
R567	Open	Normal operation.	AVR1:*
R568 (Only -24, -36, -5)	Open	Normal operation.	AVR1:*
R569 (Only -24, -36, -5)	Open	Normal operation.	AVR1:*
R589	Open	Normal operation.	AVR1:*
R590	Open	Normal operation.	AVR1:*
R591	Open	Normal operation.	AVR1:*
R592	Open	Normal operation.	AVR1:*
R593	Open	No Hazard.	AVR1:0
R594	Open	No Hazard.	AVR1:0
R595	Open	Normal operation.	AVR1:*
R596	Open	Normal operation.	AVR1:*
R597 (Only -24, -36, -48)	Open	Normal operation.	AVR1:*
R611	Open	Normal operation.	AVR1:*
R615	Open	Normal operation.	AVR1:*
R616	Open	Normal operation.	AVR1:*
R617	Open	Output voltage decreased. No hazard.	AVR1:decreased



F M E A

Component	Mode	Comment	Output Voltage (V)
R618	Open	Output voltage decreased. No hazard.	AVR1:decreased
R620	Open	Output voltage decreased. No hazard.	AVR1:decreased
R621	Open	No Hazard.	AVR1:0
R622	Open	No Hazard.	AVR1:0
R623	Open	Normal operation.	AVR1:*
R624	Open	No Hazard.	AVR1:0
R625	Open	No Hazard.	AVR1:0
R626	Open	Output voltage decreased. No hazard.	AVR1:decreased
R627	Open	Output voltage decreased. No hazard.	AVR1:decreased
R628	Open	No Hazard.	AVR1:0
R629	Open	Normal operation.	AVR1:*
R630	Open	Normal operation.	AVR1:*
R631	Open	Normal operation.	AVR1:*
R632	Open	Normal operation.	AVR1:*
R634	Open	Normal operation.	AVR1:*
R635	Open	No Hazard.	AVR1:0
R636	Open	No Hazard.	AVR1:0
R637	Open	No Hazard.	AVR1:0
R638	Open	No Hazard.	AVR1:0
R639	Open	No Hazard.	AVR1:0
R640	Open	Output voltage decreased. No hazard.	AVR1:decreased
R641	Open	No Hazard.	AVR1:0
R642	Open	Output voltage decreased. No hazard.	AVR1:decreased
R654	Open	No Hazard.	AVR1:0



F M E A

Component	Mode	Comment		Output Voltage (V)
R655	Open	No Hazard.		AVR1:0
R656	Open	Output voltage decreased. No hazard.		AVR1:decreased
R657	Open	Normal operation.		AVR1:*
R661	Open	No Hazard.		AVR1:0
R662	Open	No Hazard.		AVR1:0
R665	Open	Normal operation.		AVR1:*
R673	Open	Normal operation.		AVR1:*
R695	Open	Normal operation.		AVR1:*
R701	Open	Normal operation.		AVR1:*
R702	Open	Normal operation.		AVR1:*
R708	Open	Normal operation.		AVR1:*
R709	Open	Normal operation.		AVR1:*
R710	Open	Normal operation.		AVR1:*
R711	Open	Normal operation.		AVR1:*
R714	Open	Normal operation.		AVR1:*
R715	Open	Normal operation.		AVR1:*
R716	Open	Normal operation.		AVR1:*
R717	Open	Normal operation.		AVR1:*
R722	Open	Normal operation.		AVR1:*
R724	Open	Normal operation.		AVR1:*
SCR101	Open	A	F101 opened, No hazard.	AVR1:0
		K	F101 opened, No hazard.	AVR1:0
		G	F101 opened, No hazard.	AVR1:0
	Short	A-K	Normal operation.	AVR1:*



F M E A

Component	Mode		Comment	Output Voltage (V)
SCR101	Short	A-G	F101 opened, No hazard.	AVR1:0
		K-G	F101 opened, No hazard.	AVR1:0
	Open	7	Normal operation.	AVR1:*
		8	Normal operation.	AVR1:*
SS101	Open		No Hazard.	AVR1:0
	Short		See page 42.	
SS102	Open		No Hazard.	AVR1:0
	Short		See page 42.	
SS501	Open		No Hazard.	AVR1:0
	Short		F101 opened, No hazard.	AVR1:0
SS502	Open		Normal operation.	AVR1:*
	Short		No Hazard.	AVR1:0
SS503	Open		Normal operation.	AVR1:*
	Short		No Hazard.	AVR1:0
SS504 (Except:-36, -48)	Open		Normal operation.	AVR1:*
	Short		No Hazard.	AVR1:0
T301	Open	1	No Hazard.	AVR1:0
		3	No Hazard.	AVR1:0
		6	No Hazard.	AVR1:0
		7	No Hazard.	AVR1:0
		9	No Hazard.	AVR1:0
		10	No Hazard.	AVR1:0
	Short	6-7	No Hazard.	AVR1:0
		9-10	No Hazard.	AVR1:0



F M E A

Component		Mode	Comment	Output Voltage (V)
T302	Open	4	No Hazard.	AVR1:0
		5	No Hazard.	AVR1:0
		6	No Hazard.	AVR1:0
		7	Normal operation.	AVR1:*
		8	Normal operation.	AVR1:*
		9	Normal operation.	AVR1:*
		10	Normal operation.	AVR1:*
		11	Normal operation.	AVR1:*
		12	Normal operation.	AVR1:*
	Short	4-5	No Hazard.	AVR1:0
		5-6	No Hazard.	AVR1:0
		7-8	Normal operation.	AVR1:*
		8-9	Normal operation.	AVR1:*
		9-10	See page 42.	
		10-11	Normal operation.	AVR1:*
		11-12	Normal operation.	AVR1:*
T303	Open	1	No Hazard.	AVR1:0
		2	No Hazard.	AVR1:0
		3	Output voltage decreased. No hazard.	AVR1:decreased
		4	Output voltage decreased. No hazard.	AVR1:decreased
	Short	1-2	Normal operation.	AVR1:*
		3-4	Normal operation.	AVR1:*
T401	Open	1	No Hazard.	AVR1:0
		2	No Hazard.	AVR1:0



F M E A

Component	Mode		Comment	Output Voltage (V)
T401	Open	3	No Hazard.	AVR1:0
		4	No Hazard.	AVR1:0
		6	No Hazard.	AVR1:0
		7	No Hazard.	AVR1:0
		9	No Hazard.	AVR1:0
		10	No Hazard.	AVR1:0
	Short	1-2	See page 42.	
		2-3	No Hazard.	AVR1:0
		3-4	No Hazard.	AVR1:0
		6-7	No Hazard.	AVR1:0
		9-10	No Hazard.	AVR1:0
TH101	Open		No Hazard.	AVR1:0
	Short		Normal operation.	AVR1:*
TR101	Open	D	No Hazard.	AVR1:0
		S	No Hazard.	AVR1:0
		G	F101 opened, No hazard.	AVR1:0
	Short	D-S	See page 42.	
		S-G	No Hazard.	AVR1:0
		G-D	See page 42.	
	Open	D	F101 opened, No hazard.	AVR1:0
		S	F101 opened, No hazard.	AVR1:0
		G	F101 opened, No hazard.	AVR1:0
	Short	D-S	F101 opened, No hazard.	AVR1:0
		S-G	F101 opened, No hazard.	AVR1:0



F M E A

Component	Mode		Comment	Output Voltage (V)
TR102	Short	G-D	F101 opened, No hazard.	AVR1:0
TR202	Open	D	Normal operation.	AVR1:*
		S	Normal operation.	AVR1:*
		G	No Hazard.	AVR1:0
	Short	D-S	No Hazard.	AVR1:0
		S-G	Normal operation.	AVR1:*
		G-D	No Hazard.	AVR1:0
TR301	Open	D	No Hazard.	AVR1:0
		S	No Hazard.	AVR1:0
		G	F101 opened, No hazard.	AVR1:0
	Short	D-S	See page 42.	
		S-G	No Hazard.	AVR1:0
		G-D	See page 42.	
TR303	Open	D	No Hazard.	AVR1:0
		S	No Hazard.	AVR1:0
		G	F101 opened, No hazard.	AVR1:0
	Short	D-S	See page 42.	
		S-G	No Hazard.	AVR1:0
		G-D	See page 42.	
TR306	Open	C	No Hazard.	AVR1:0
		E	No Hazard.	AVR1:0
		B	No Hazard.	AVR1:0
	Short	C-E	No Hazard.	AVR1:0
		E-B	No Hazard.	AVR1:0



F M E A

Component	Mode		Comment	Output Voltage (V)
TR306	Short	B-C	No Hazard.	AVR1:0
TR307	Open	D	Normal operation.	AVR1:*
		S	Normal operation.	AVR1:*
		G	No Hazard.	AVR1:0
	Short	D-S	No Hazard.	AVR1:0
		S-G	Normal operation.	AVR1:*
		G-D	No Hazard.	AVR1:0
TR310	Open	C	No Hazard.	AVR1:0
		E	No Hazard.	AVR1:0
		B	No Hazard.	AVR1:0
	Short	C-E	No Hazard.	AVR1:0
		E-B	No Hazard.	AVR1:0
		B-C	Normal operation.	AVR1:*
TR312	Open	C	No Hazard.	AVR1:0
		E	Normal operation.	AVR1:*
		B	Normal operation.	AVR1:*
	Short	C-E	No Hazard.	AVR1:0
		E-B	No Hazard.	AVR1:0
		B-C	Output voltage decreased. No hazard.	AVR1:decreased
TR313	Open	S(1)	F101 opened, No hazard.	AVR1:0
		G(2)	F101 opened, No hazard.	AVR1:0
		D(3)	No Hazard.	AVR1:0
		S(4)	No Hazard.	AVR1:0
		G(5)	F101 opened, No hazard.	AVR1:0



F M E A

Component	Mode		Comment	Output Voltage (V)
TR313	Open	D(6)	F101 opened, No hazard.	AVR1:0
	Short	S-G(1-2)	F101 opened, No hazard.	AVR1:0
		G-D(2-3)	F101 opened, No hazard.	AVR1:0
		D-S(3-4)	F101 opened, No hazard.	AVR1:0
		S-G(4-5)	F101 opened, No hazard.	AVR1:0
		G-D(5-6)	F101 opened, No hazard.	AVR1:0
TR314	Open	C	Normal operation.	AVR1:*
		E	Normal operation.	AVR1:*
		B	Normal operation.	AVR1:*
	Short	C-E	No Hazard.	AVR1:0
		E-B	No Hazard.	AVR1:0
		B-C	Output voltage decreased. No hazard.	AVR1:decreased
TR322	Open	C	No Hazard.	AVR1:0
		E	No Hazard.	AVR1:0
		B	No Hazard.	AVR1:0
	Short	C-E	Normal operation.	AVR1:*
		E-B	No Hazard.	AVR1:0
		B-C	Normal operation.	AVR1:*
TR501	Open	C	Normal operation.	AVR1:*
		E	Normal operation.	AVR1:*
		B	Normal operation.	AVR1:*
	Short	C-E	No Hazard.	AVR1:0
		E-B	Normal operation.	AVR1:*
		B-C	No Hazard.	AVR1:0



F M E A

Component	Mode		Comment	Output Voltage (V)
TR603	Open	C	Normal operation.	AVR1:*
		E	Normal operation.	AVR1:*
		B	Normal operation.	AVR1:*
	Short	C-E	Normal operation.	AVR1:*
		E-B	Normal operation.	AVR1:*
		B-C	Normal operation.	AVR1:*
TR604	Open	C	Normal operation.	AVR1:*
		E	Normal operation.	AVR1:*
		B	Normal operation.	AVR1:*
	Short	C-E	Normal operation.	AVR1:*
		E-B	Normal operation.	AVR1:*
		B-C	Normal operation.	AVR1:*
TR703	Open	C	Normal operation.	AVR1:*
		E	Normal operation.	AVR1:*
		B	Normal operation.	AVR1:*
	Short	C-E	Normal operation.	AVR1:*
		E-B	Normal operation.	AVR1:*
		B-C	Normal operation.	AVR1:*
TR704	Open	C	Normal operation.	AVR1:*
		E	Normal operation.	AVR1:*
		B	Normal operation.	AVR1:*
	Short	C-E	No Hazard.	AVR1:0
		E-B	Normal operation.	AVR1:*
		B-C	Normal operation.	AVR1:*



F M E A

Component	Mode		Comment	Output Voltage (V)
VR601	Open	brush	Output voltage increased. No hazard.	AVR1: Increased(130%)
			No Hazard.	AVR1:0
	Short		Output voltage decreased. No hazard.	AVR1: Decreased(70%)
ZD101	Open		Normal operation.	AVR1:*
	Short		F101 opened, No hazard.	AVR1:0
ZD301	Open		Normal operation.	AVR1:*
	Short		No Hazard.	AVR1:0
ZD302	Open		Normal operation.	AVR1:*
	Short		F101 opened, No hazard.	AVR1:0



ABNORMAL TEST RESULT

Component	Mode		Comment	Output Voltage (V)
C109	Open		No Hazard.	AVR1:0
C117	Short		F101 opened, No hazard.	AVR1:0
C118	Short		F101 opened, No hazard.	AVR1:0
C119	Short		F101 opened, No hazard.	AVR1:0
C207	Short		Normal operation.	AVR1:*
C709	Short		Normal operation.	AVR1:*
C716	Short		Normal operation.	AVR1:*
IC401	Short	4-5	F101 opened, No hazard.	AVR1:0
		10-11	No Hazard.	AVR1:0
SS101	Short		F101 opened, No hazard.	AVR1:0
SS102	Short		F101 opened, No hazard.	AVR1:0
T302	Short	9-10	No Hazard.	AVR1:0
T401	Short	1-2	No Hazard.	AVR1:0
TR101	Short	D-S	F101 opened, No hazard.	AVR1:0
		G-D	F101 opened, No hazard.	AVR1:0
TR301	Short	D-S	F101 opened, No hazard.	AVR1:0
		G-D	F101 opened, No hazard.	AVR1:0
TR303	Short	D-S	F101 opened, No hazard.	AVR1:0
		G-D	F101 opened, No hazard.	AVR1:0