

1	F	unction	TECS-9
	1.1 1.2 1.3 1.4 1.5 1.6 1.7	Input voltage range Inrush current limiting Overcurrent protection Output ripple and ripple noise Isolation Reducing standby power	TECS-9 TECS-9 TECS-9 TECS-9 TECS-9
2	W	/iring Input/Output Pin	TECS-10
3] Se	eries / Parallel and Redundancy Operation	TECS-10
	3.2	Parallel and redundancy operation	TECS-10
4	Te	emperature Measurement Point	TECS-11
5	Li	fe Expectancy and Warranty	TECS-12
6	0	ption and Others	TECS-12
	6.1	Others	TECS-12



1 Function

1.1 Input voltage range

- ■The range is from 85VAC to 264VAC.
 - In cases that conform with safety standard, input voltage range is 100VAC to 240VAC (50/60Hz).
 - When DC input is required, Please contact us.
- ■If input value doesn't fall within above range, a unit may not operate in accordance with specifications and/or start hunting or fail. If you need to apply a square waveform input voltage, which is commonly used in UPS and inverters, please contact us.
- ■When the input voltage changes suddenly, the output voltage accuracy might exceed the specification. Please contact us. If the restart time of the short interruption power failure is less than 3 seconds, perform a thorough evaluation.
- ■A power factor improvement circuit (active filter) is not built-in. If you use multiple units for a single system, standards for input harmonic current may not be satisfied. Please contact us for details.

1.2 Inrush current limiting

- ■An inrush current limiting circuit is built-in.
- ■If you need to use a switch on the input side, please select one that can withstand an input inrush current.
- ■Thermistor is used in the inrush current limiting circuit. When you turn the power ON/OFF repeatedly within a short period of time. please have enough intervals so that a power supply cools down before being turned on.

1.3 Overcurrent protection

■An overcurrent protection circuit is built-in and activated over 105% of the rated current. A unit automatically recovers when a fault condition is removed.

Please do not use a unit in short circuit and/or under an overcurrent condition.

■Hiccup Operation Mode

When the output voltage drops at overcurrent, the average output current is reduced by hiccup operation of power supply. Please contact us for details.

1.4 Overvoltage protection

■An overvoltage protection circuit is built-in. If the overvoltage protection circuit is activated, shut down the input voltage, wait more than 3 minutes and turn on the AC input again to recover the output voltage. Recovery time varies depending on such factors as input voltage value at the time of the operation.

Please avoid applying a voltage exceeding the rated voltage to an output terminal. Doing so may cause a power supply to malfunction or fail. If you cannot avoid doing so, for example, if you need to operate a motor, etc., please install an external diode on the output terminal to protect the unit.

1.5 Output ripple and ripple noise

- ■The specified ripple and ripple noise are measured by the method introduced in Fig.1.1.
- ■Capacitors Co and C1 should be hybrid electrolytic capacitors, ceramic capacitors, or other capacitors with good high frequency characteristics. The output ripple voltage may be affected by the ESR/ESL of the capacitor or the wiring impedance.

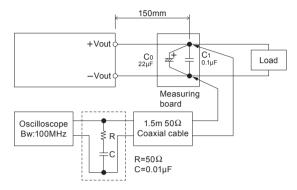


Fig.1.1 Measuring method of Ripple and Ripple Noise

Remarks:

When GND cable of probe with flux of magnetic force from power supply are crossing, ripple and ripple noise might not be measured correctty.

Please note the measuring environment.

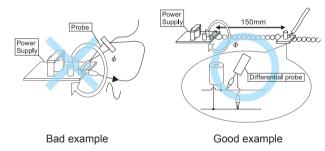


Fig.1.2. Example of measuring output ripple and ripple noise

1.6 Isolation

- ■For a receiving inspection, such as Hi-Pot test, gradually increase (decrease) the voltage for the start (shut down). Avoid using Hi-Pot tester with the timer because it may generate voltage a few times higher than the applied voltage, at ON/OFF of a timer.
- ■During isolation test between input and output, make short circuits at the input and output in each.

1.7 Reducing standby power

■Burst operation at light loading, the internal switch element is intermittent operated, and the switching power loss is decreased. (Standby power of AC230V input: 0.2W typ) Burst operation can cause sound noise.



2 Wiring Input/Output Pin

■The TECS series basically does not require an output capacitor, but the ripple voltage can be reduced by connecting an output capacitor.

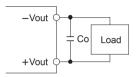


Fig.2.1 Connecting example of an external capactior to the output side

- ■If output current decreases rapidly, output voltage rises transiently and the overvoltage protection circuit may operate. In this case, please Install an external capacitor Co between +Vout and -Vout pins for stable operation of the power supply.
- ■Connectable external capacitor on the output side is shown in Table 2.1.

Table 2.1 Connectable external capacitor on the output side

No.	Output voltage	TECS45F/TECS65F	
1	5V	0 - 6,800μF	
2	12V	0 - 4,700μF	
3	24V	0 - 1,000µF	

■When connect the output to FG of an equipment, a noise may become big. The noise can be reduced by connecting external filter and grounding capacitor on the input side.

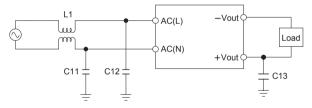


Fig.2.2 Recomemended circuit of connect output to FG

3 Series / Parallel and **Redundancy Operation**

3.1 Series operation

■You can use power supplies in series operation. The output current in series operation should be lower than the rated current of a power supply with the lowest rated current among power supplies that are serially connected. Please make sure that no current exceeding the rated current flows into a power supply.

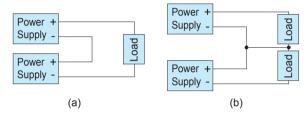


Fig.3.1 Examples of connecting in series operation

3.2 Parallel and redundancy operation

- ■Parallel operation is not possible.
- ■Redundancy operation is available by wiring as shown below.

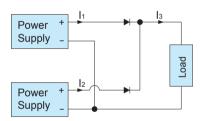


Fig.3.2 Example of redundancy operation

■Even a slight difference in output voltage can affect the balance between the values of I₁ and I₂.

Please make sure that the value of I₃ does not exceed the rated current of a power supply.

 $I_3 \le$ the rated current value



4 Temperature Measurement Point

- ■It is necessary to note thermal fatigue life by power cycle. Please reduce the temperature fluctuation range as much as possible when the up and down of temperature are frequently generated.
- ■Please have sufficient ventilation to keep the temperature of point (1) in Fig.4.1 - 4.2 at Table4.1 - 4.2 or below. Please also make sure that the ambient temperature does not exceed 70°C.
- ■The life expectancy in the upper bound temperature is two years or
- ■Please be careful of electric shock or earth leakage in case of temperature measurement, because Point ① is live potential.
- ■Please contact us for details.

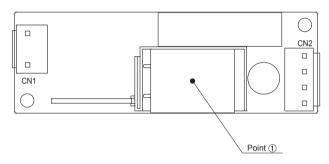


Fig.4.1 Temperature measurement point of TECS45F(Top View)

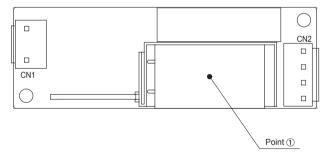


Fig.4.2 Temperature measurement point of TECS65F(Top View)

Table4.1 Maximum temperature of measurement point (TECS45F)

Cooling	Voltage	Mounting method	Load factor	Maximum temperature [℃]
metriod		metriod		Capacitor
			60% <lo≦100%< td=""><td>83</td></lo≦100%<>	83
		A,C,E,F	30% <lo≦ 60%<="" td=""><td>84</td></lo≦>	84
	5V		lo≦ 30%	85
) 3v		60% <lo≦100%< td=""><td>79</td></lo≦100%<>	79
		B,D	30% <lo≤ 60%<="" td=""><td>82</td></lo≤>	82
			lo≦ 30%	83
	40)/	A,C,E,F B,D	60% <lo≦100%< td=""><td>86</td></lo≦100%<>	86
			30% <lo≦ 60%<="" td=""><td>91</td></lo≦>	91
Convention			lo≦ 30%	88
Convection	12V		60% <lo≦100%< td=""><td>82</td></lo≦100%<>	82
			30% <lo≦ 60%<="" td=""><td>88</td></lo≦>	88
			lo≦ 30%	86
		A,C,E,F	60% <lo≦100%< td=""><td>86</td></lo≦100%<>	86
			30% <lo≤ 60%<="" td=""><td>88</td></lo≤>	88
	24V		lo≦ 30%	85
			60% <lo≦100%< td=""><td>82</td></lo≦100%<>	82
		B,D	30% <lo≦ 60%<="" td=""><td>86</td></lo≦>	86
			lo≦ 30%	83
Forced cir	E\/ 12\/ 24\/	ABCDEE	70% <lo≦100%< td=""><td>80</td></lo≦100%<>	80
Forced air	3V, 1ZV,Z4V	A,B,C,D,E,F	lo≦ 70%	80

Table4.2 Maximum temperature of measurement point (TECS65F)

1001011.2111	rubic+.2 Maximum temperature of meadurement point (1200001)							
Cooling method			Load factor	Maximum temperature [℃] Capacitor				
			60% <lo≦100%< td=""><td>78</td></lo≦100%<>	78				
		A,C,E		87				
			30% <lo≤ 60%<="" td=""><td></td></lo≤>					
	5V		lo≦ 30%	85				
			60% <lo≦100%< td=""><td>74</td></lo≦100%<>	74				
		B,D,F	30% <lo≤ 60%<="" td=""><td>85</td></lo≤>	85				
			lo≦ 30%	84				
	12V	A,C,E	60% <lo≦100%< td=""><td>86</td></lo≦100%<>	86				
			30% <lo≦ 60%<="" td=""><td>91</td></lo≦>	91				
Convection			lo≦ 30%	87				
Convection		B,D,F	60% <lo≦100%< td=""><td>81</td></lo≦100%<>	81				
			30% <lo≤ 60%<="" td=""><td>87</td></lo≤>	87				
			lo≦ 30%	84				
			60% <lo≦100%< td=""><td>86</td></lo≦100%<>	86				
		A,C,E	30% <lo≤ 60%<="" td=""><td>90</td></lo≤>	90				
	24V		lo≦ 30%	84				
			60% <lo≦100%< td=""><td>78</td></lo≦100%<>	78				
		B,D,F	30% <lo≦ 60%<="" td=""><td>85</td></lo≦>	85				
			lo≦ 30%	81				
Forced air	E\/ 12\/ 24\/	A,B,C,D,E,F	70% <lo≦100%< td=""><td>80</td></lo≦100%<>	80				
Forced air	50,120,240	\A,D,U,D,E,F	lo≦ 70%	80				



5 Life Expectancy and Warranty

■Life expectancy

Table5.1 Life expectancy (TECS45F)

indicate and expectation (1.200 to 1)							
0 "	Voltage	Mounting method	Average ambient	Life expectancy			
Cooling method			temperature (year)	Load factor			
metriou				lo≦75%	75% <lo≦100%< td=""></lo≦100%<>		
	5V	A,B,C,D,E,F	Ta=25°C or less	10years or more	10years or more		
	30		Ta=35℃	10years or more	6years		
	12V 24V	A,B,C,D,E	Ta=30°C or less	10years or more	7years		
			Ta=40°C	10years or more	3years		
Convection		F	Ta=25°C or less	10years or more	10years or more		
Convection			Ta=35℃	10years or more	5years		
		A,B,C,D,E	Ta=40°C or less	10years or more	6years		
			Ta=50°C	6years	3years		
		F	Ta=35°C or less	10years or more	8years		
			Ta=45°C	9years	4years		
Forced air	5V,12V,24V	A,B,C,D,E,F	Ta=50°C or less	5years	5years		
roiced all			Ta=60°C	5years	3years		

Table5.2 Life expectancy (TECS65F)

Caalina		Mounting	Average ambient temperature	Life expectancy	
Cooling method	Voltage	Mounting method		Load factor	
method		mounou	(year)	lo≦75%	75% <lo≦100%< td=""></lo≦100%<>
		A,B,C,D,E	Ta=30°C or less	10years or more	7years
	5V		Ta=40°C	10years or more	3years
	υV	г	Ta=25°C or less	10years or more	7years
		F	Ta=35℃	10years or more	3years
	12V	12V A,B,C,D,E	Ta=30°C or less	10years or more	6years
Convection			Ta=40°C	8years	3years
CONVECTION			Ta=25°C or less	10years or more	8years
			Ta=35℃	10years or more	4years
	24V	ADCE	Ta=35°C or less	10years or more	6years
		A,B,C,E	Ta=45°C	9years	3years
		D,F	Ta=30°C or less	10years or more	6years
			Ta=40°C	6years	3years
Forced air	Forced air 5V,12V,24V	ADODEE	Ta=50°C or less	5years	5years
roiced all		5V,12V,24V A,B,C,D,E,F		5years	3years

■Warranty

Table5.3 Warranty (TECS45F)

O a allia a		Mounting method	Average ambient temperature	Warranty	
Cooling method	Voltage			Load factor	
metriod		metrou	(year)	lo≦75%	75% <lo≦100%< td=""></lo≦100%<>
	5V	4 D O D E E	Ta=25°C or less	5years	5years
	٥٧	A,B,C,D,E,F	Ta=35℃	5years	3years
		A,B,C,D,E	Ta=30°C or less	5years	5years
	12V		Ta=40°C	5years	2years
Convection		F	Ta=25°C or less	5years	5years
Convection		Г	Ta=35℃	5years	3years
		A,B,C,D,E	Ta=40°C or less	5years	5years
			Ta=50°C	5years	2years
		F	Ta=35°C or less	5years	5years
			Ta=45°C	5years	3years
Formed air	5V,12V,24V	4V A,B,C,D,E,F	Ta=50°C or less	5years	5years
Forced air			Ta=60°C	5years	3years

Table5.4 Warranty (TECS65F)

0 "	Voltage	Mounting method	Average ambient temperature	Warranty		
Cooling method				Load factor		
IIIetilou		IIICIIIOU	(year)	lo≦75%	75% <lo≦100%< td=""></lo≦100%<>	
		ADODE	Ta=30°C or less	5years	5years	
	5V	A,B,C,D,E	Ta=40°C	5years	3years	
) 3v	F	Ta=25°C or less	5years	5years	
			Ta=35℃	5years	3years	
	12V 24V	A,B,C,D,E F	Ta=30°C or less	5years	5years	
Convection			Ta=40°C	5years	2years	
Convection			Ta=25°C or less	5years	5years	
			Ta=35℃	5years	3years	
		A,B,C,E	Ta=35°C or less	5years	4years	
			Ta=45°C	5years	2years	
		D,F	Ta=30°C or less	5years	4years	
			Ta=40°C	5years	2years	
Forced air	5V,12V,24V	5V,12V,24V A,B,C,D,E,F	Ta=50°C or less	5years	5years	
i orceu all			Ta=60°C	5years	3years	

6 Option and Others

6.1 Others

- ■This power supply is the open frame type. Do not drop conductive objects in the power supply.
- ■At light load, there remains high voltage inside the power supply for a few minutes after power OFF.
 - Be careful of electric shock during maintenance.
- ■This power supply is manufactured by SMD technology. The stress to PCB like twisting or bending causes the defect of the unit, so handle the unit with care.
 - · Please tighten the screws in all two mounting holes.
 - · Install it so that PCB may become parallel to the clamp face.
 - · Avoid dropping unit.
- ■SMD components are mounted on the front and back surfaces. Please be careful not to put stress on the SMD components.
- ■While turning on the electricity, and for a while after turning off, please don't touch the inside of power supply because some components could be hot.