

1 Functions UMCS-8

- 1.1 Input Voltage RangeUMCS-8
- 1.2 Inrush Current LimitingUMCS-8
- 1.3 Overcurrent ProtectionUMCS-8
- 1.4 Overvoltage ProtectionUMCS-8
- 1.5 Output Ripple NoiseUMCS-8
- 1.6 IsolationUMCS-8
- 1.7 Low Power ConsumptionUMCS-8

2 Series Operation and Parallel Operation UMCS-9

- 2.1 Series OperationUMCS-9
- 2.2 Parallel OperationUMCS-9

3 Life Expectancy and Warranty UMCS-9

4 Ground UMCS-9

5 Options and Others UMCS-9

- 5.1 Outline of OptionsUMCS-9
- 5.2 Medical Isolation GradeUMCS-9
- 5.3 OthersUMCS-10

1 Functions

1.1 Input Voltage Range

- The range is from 85VAC to 264VAC
In cases that conform with safety standard, input voltage range is 100VAC to 240VAC (50/60Hz).
- Power factor correction is not built-in.
- If the input voltage is outside the rated range, the power supply may malfunction. Operate in accordance within in the specifications.
- If the input voltage changes suddenly, the output voltage may go outside the specifications. Consult us for more details.

1.2 Inrush Current Limiting

- Inrush current protection is built-in.
- If you need to use a switch on the input side, select one that can withstand an input inrush current.
- Thermistor is used in the inrush current limiting circuit. When you turn the power supply on and off repeatedly, have enough intervals for the power supply to cool down before being turned on again.

1.3 Overcurrent Protection


- Overcurrent protection is built-in. It works at more than 105% of the rated output current. The power supply recovers automatically when the overcurrent condition is removed. Do not use the power supply under a short-circuit or overcurrent condition.
- Hiccup Operation Mode
When overcurrent protection works and the output voltage drops, the output voltage goes into Hiccup mode so that the average output current can decrease.

1.4 Overvoltage Protection

- An overvoltage protection circuit is built-in. If the overvoltage protection circuit is activated, shut down the input voltage, wait more than 3 minutes and turn on the AC input again to recover the output voltage. Recovery time varies depending on such factors as input voltage value at the time of the operation.
- Remarks :** Please avoid applying a voltage exceeding the rated voltage to an output terminal. Doing so may cause a power supply to malfunction or fail. If you cannot avoid doing so, for example, if you need to operate a motor, etc., please install an external diode on the output terminal to protect the unit.

1.5 Output Ripple Noise

- Output ripple noise may be influenced by the measuring environment.
The measuring method shown in Fig. 1.1 is recommended.

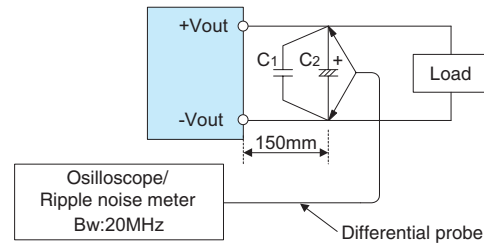

C1 : Film capacitor 0.1 μ F
C2 : Aluminum electrolytic capacitor 47 μ F

Fig.1.1 Measuring method of Ripple Noise

Remarks : When measuring output ripple noise with an oscilloscope, do not let the oscilloscope's GND cable cross the magnetic flux from the power supply. Otherwise there may be electrical potential generated on the GND cable and the measuring result may not be accurate.

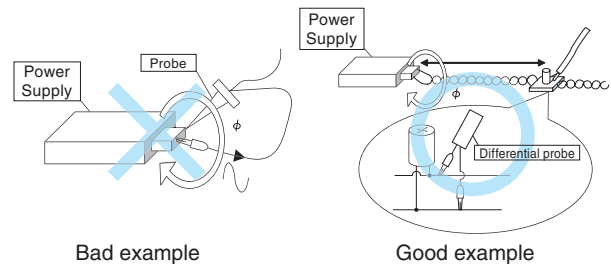


Fig.1.2 Example of measuring output ripple noise

1.6 Isolation

- For a receiving inspection, such as Hi-Pot test, gradually increase (decrease) the voltage for the start (shut down). Avoid using Hi-Pot tester with the timer because it may generate voltage a few times higher than the applied voltage, at ON/OFF of a timer.

1.7 Low Power Consumption

- The power supplies are designed for low power consumption at no load.
- When the load factor is low ($I_o=0\sim 20\%$ typ), the switching power loss is reduced by burst operation, which will cause ripple noise to go beyond the specifications.
- Ripple noise during burst operation will change depending on the input voltage and the output current. Consult us for advice on how to reduce ripple noise.
- When there is a need to measure the stand-by power consumption, measure it by using the average mode of the tester. The measuring environment may influence the result. Consult us for more details.

2 Series Operation and Parallel Operation

2.1 Series Operation

■ The power supplies can be used in series connection. The output current in series operation must be lower than the rated current of the power supply with the lowest rated current among the power supplies connected in series. Make sure no current exceeding the rated current flows into a power supply.

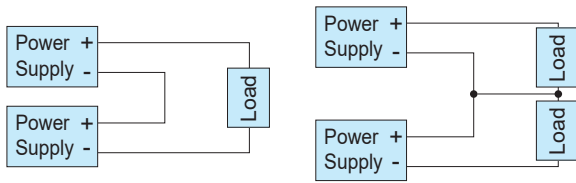


Fig.2.1 Examples of connecting in series operation

2.2 Parallel Operation

■ Redundant operation is possible by wiring as shown below.

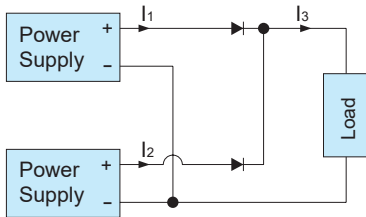


Fig.2.2 Example of redundancy operation

■ Even a slight difference in output voltage can affect the balance between the values of I_1 and I_2 .
Make sure the value of I_3 does not exceed the rated output current of the power supply.

$$I_3 \leq \text{the rated current value}$$

■ Parallel operation is not possible.

3 Life Expectancy and Warranty

■ Warranty

Table 3.1 Warranty (UMCS30F)

Cooling Method	Voltage	Average ambient temperature	Warranty [years]	
			Load factor $I_o \leq 75\%$	Load factor $75\% < I_o \leq 100\%$
Convection	5V - 48V	Ta = 30°C or less	5	5
		Ta = 40°C	5	3

Table 3.2 Warranty (UMCS60F)

Cooling Method	Voltage	Average ambient temperature	Warranty [years]	
			Load factor $I_o \leq 75\%$	Load factor $75\% < I_o \leq 100\%$
Convection	5V, 12V	Ta = 30°C or less	5	5
		Ta = 35°C	5	3
	24V, 48V	Ta = 30°C or less	5	5
		Ta = 40°C	5	3

4 Ground

■ This power supply is designed for Class II equipment and does not need to be connected to FG.

Be careful when connected to output terminal and FG because the conducted noise voltage.

5 Options and Others

5.1 Outline of Options

● -T

- The -T Option has changed the I/O interface from the connector to the terminal block Type.
- Please contact us for details about appearance.

5.2 Medical Isolation Grade

■ UMCS series meets 2MOPP

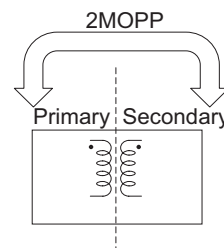


Fig.5.1 Medical Isolation Grade

5.3 Others

- If large capacitors are connected to the output terminals (load side), the output voltage may stop or become unstable. Consult us for advice.
- If the power supply is turned off at no load, the output voltage remains for a few minutes as the power supply is designed for low internal power consumption. Be careful of electrical shock at the time of maintenance.